

# Inverter Wiring & Set up



**Running Directly From Inverter** - Wire as shown - power up inverter - Open front of the inverter showing joystick. Use the joystick to select the required option.

**Using Start / Stop Button on inverter.**  
 DRV Setting to be changed to 0

**Using Potentiometer on the inverter**  
 FRQ Setting to be changed to 2

**Running External Start / Stop** - Wire as shown - Start stop button to be wired into P1 & CM—power up inverter - Open front of the inverter showing joystick. Use the joystick to select the required option.


**Using External Start / Stop Button.**  
 DRV Setting to be changed to 1

**External Potentiometer** - Wire as shown - Start stop button to be wired into VR, V1 & CM —power up inverter - Open front of the inverter showing joystick. Use the joystick to select the required option.

**Using External Potentiometer.**  
 DRV Setting to be changed to 7



Amek Ltd: Bergen Way, Hull, HU7 0YQ  
 Tel: 01482 838605 Fax: 01482 838705

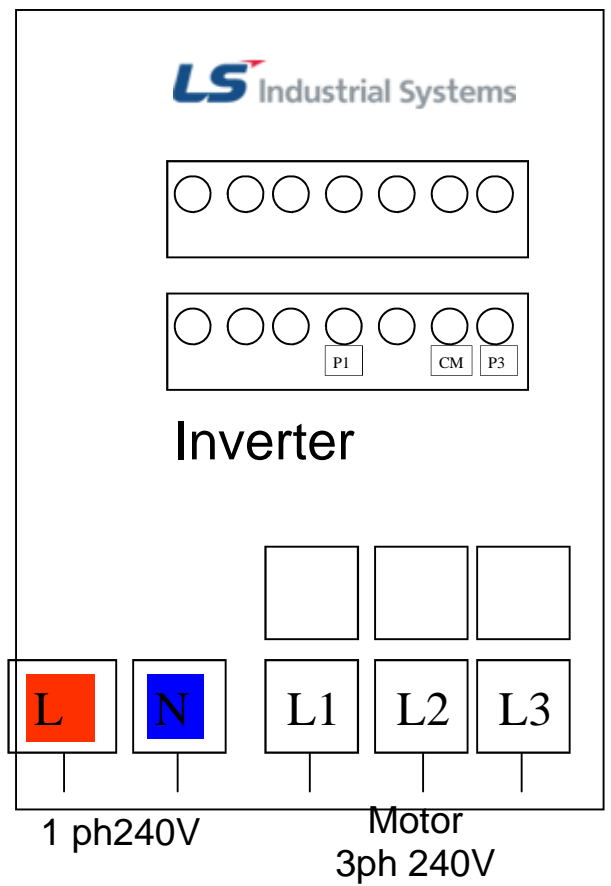

**RAMP UP TIME** - Change ACC setting

**RAMP DOWN TIME** (Stopping time) - Change DEC setting

Notes: Press the up arrow to select FRQ, DRV etc. Press the joystick centrally to select the option. - Once changed press centrally twice



- Other Electrical Products Available from Amek**
- Contactors
  - Inverters
  - Power Supplies
  - Push buttons
  - Din Rail terminals
  - DOL & Overloads
  - Timers, Counters & PEC's